



# INSTALLING DRIVERS

---


Connecting Your Chromebook To The Printer



Outline



Adding the Printer

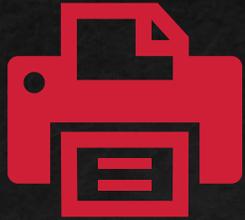

First Time Printing



Conclusion

# Installation Outline


# Course Outline

## We will cover these skills

- Connecting your Chromebook to your Sharp MFP.
- Initial Print Setup for your Chromebook.

# Adding the Printer

- To start off, select Settings.
- Click Advanced to see more categories.
- Next, click Print and scan.

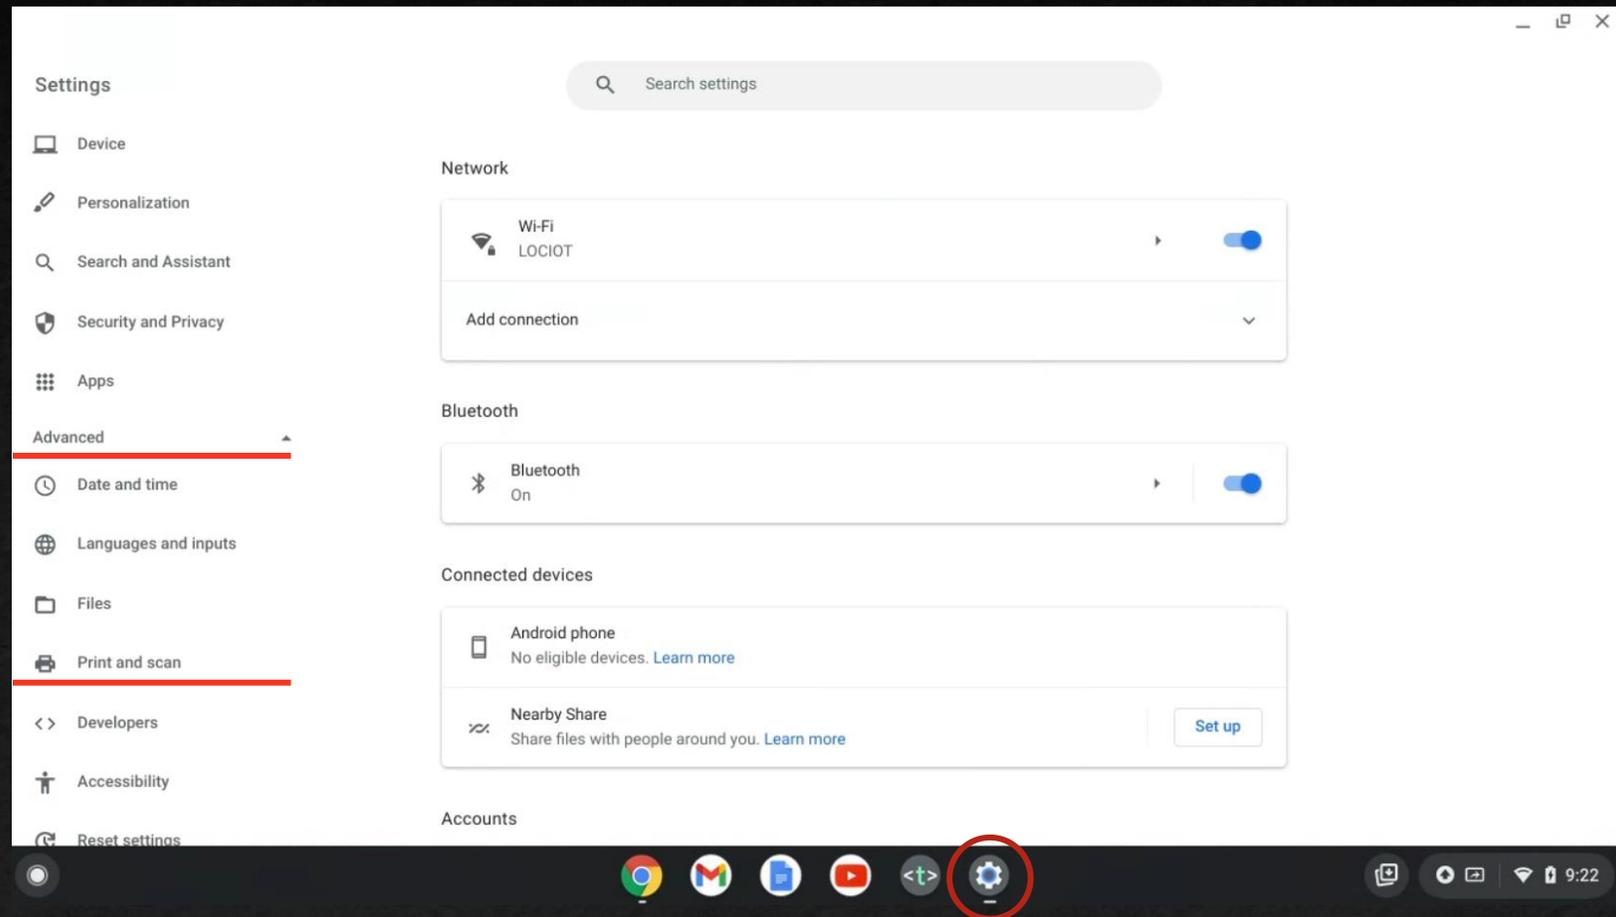


# Adding the Printer

- Then, select Printers.



- Next, select Add printer.

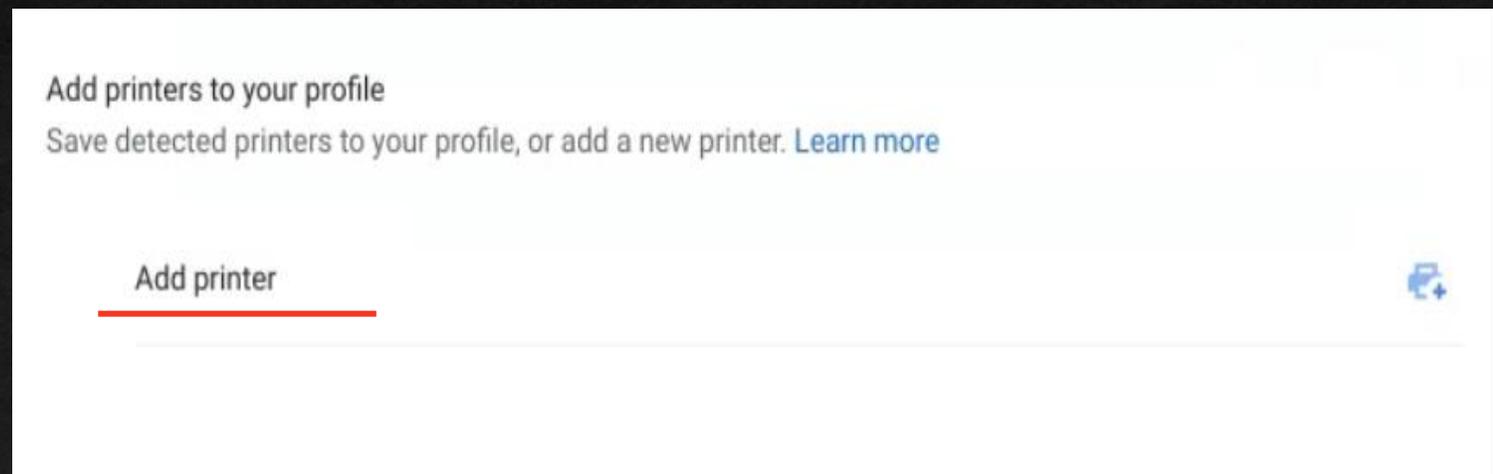

# Adding the Printer

- Here you will name the printer's profile for your computer.
- You will also type the IP address of the printer.
- For Protocol, you can either use Internet Printing Protocol (IPP) or Line Printer Daemon (LPD). Both will provide the same level of utility.
- Under Queue, we will not touch what is already present.
- Select the blue Add button to continue.

The screenshot shows a dialog box titled "Add a printer manually". It contains the following fields and controls:

- Name:** A text input field containing "Sharp MX-3570".
- Address:** A text input field containing "10.0.2.88".
- Protocol:** A dropdown menu currently showing "Internet Printing Protocol (IPP)".
- Queue:** A text input field containing "ipp/print".
- Buttons:** At the bottom, there are three buttons: "Print server" (light blue), "Cancel" (white with blue border), and "Add" (solid blue).

# Adding the Printer

- If you receive a window like this, configure it according to the Make and Model of your printer.
- For me, I have a Sharp MX-3570N which will provide me with a PS (PostScript) driver.
- Most modern Sharp machines will have PS compatibility, so this driver type will work just fine.
- After you find your Model of printer, select the blue Add button.
- The printer is now added to your Chromebook!

Advanced printer configuration

Sharp MX-3570 could not be configured automatically. Please specify advanced printer details. [Learn more](#)

Manufacturer

Sharp

Model

Sharp MX-3570N PS


Or specify your printer PPD [Learn more](#)

Browse

Cancel Add


# First Time Printing

- The first time you try to print a document, you will need to change your default Destination.
- Click the arrow and select See more...

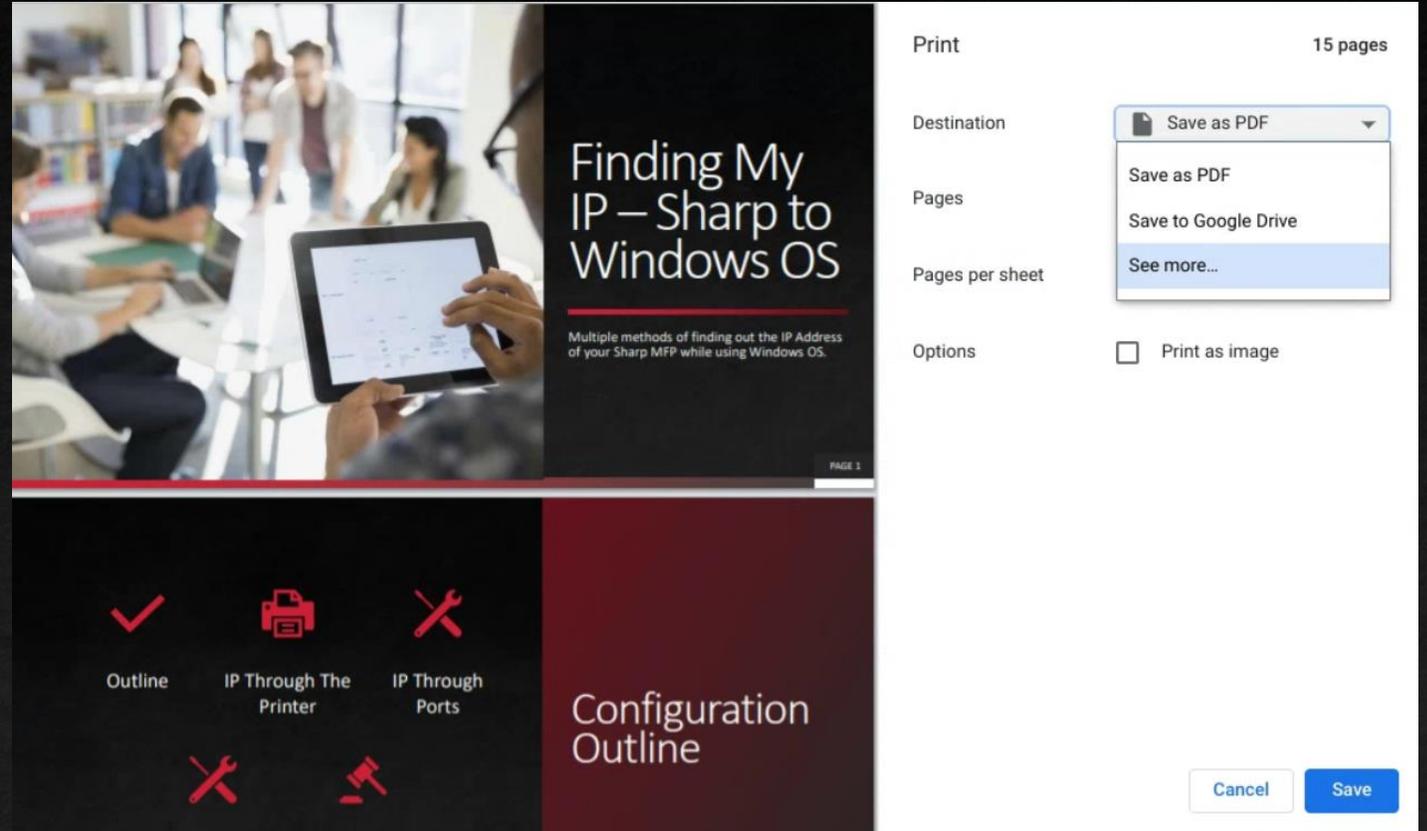


# First Time Printing

- From here you can select your newly added printer.

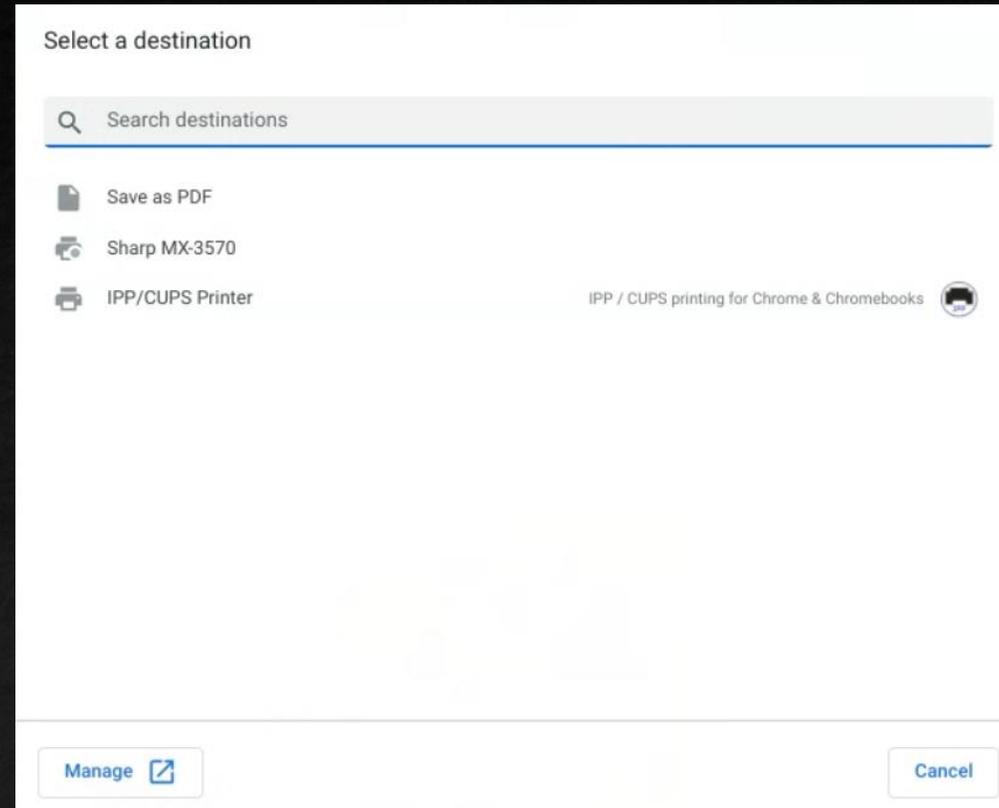

# Congratulations!

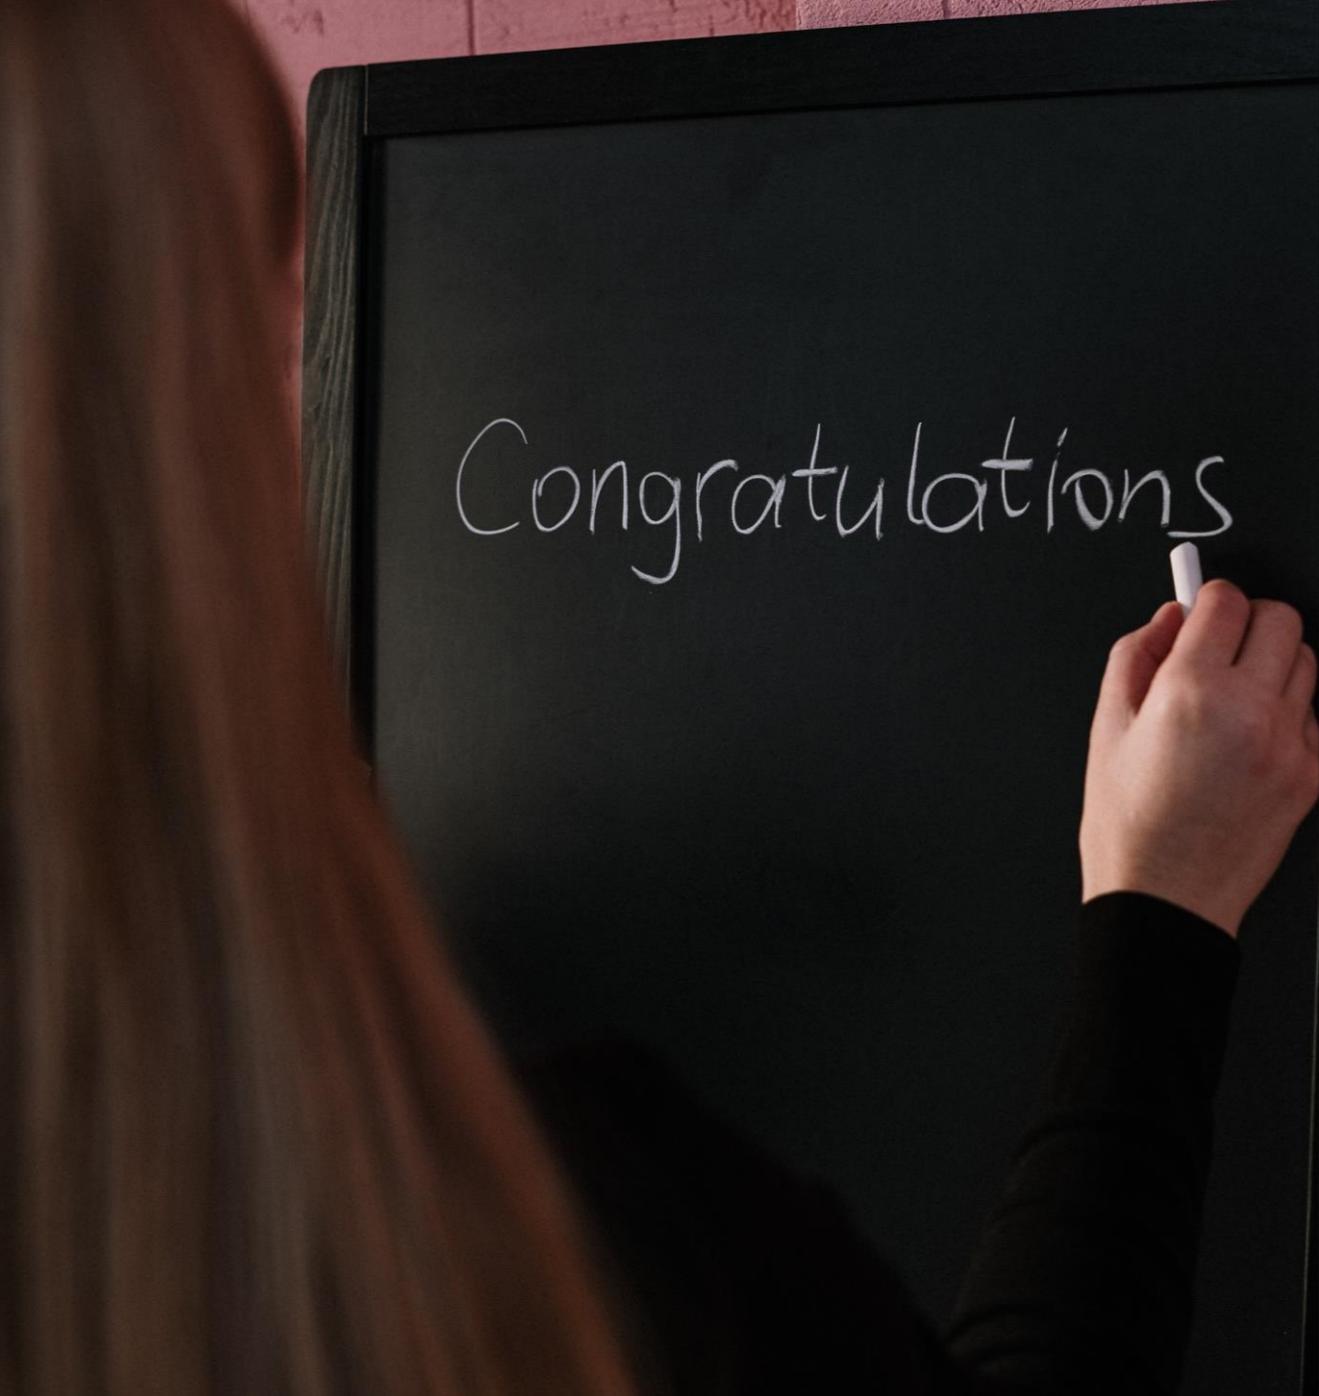A person with long brown hair, seen from the back, is writing the word "Congratulations" in white chalk on a black chalkboard. The person is wearing a black long-sleeved shirt and is holding a white chalk piece in their right hand. The chalkboard is mounted on a wall with a light-colored brick pattern.

Congratulations

- You have successfully connected your Chromebook to your Sharp printer.

# Conclusion

- Chromebooks have made the process streamlined for quick and easy connectivity to their machines.
- If you run into any issues, please reach out and we will assist in the connection process.

\*You can reach the Les Olson Connectivity Helpdesk at (801)413-2106\*





# THANK YOU!

---

You have successfully connected your  
Chromebook to your Sharp Printer!