

## Sharp FO-DC Series All Image and Memory Clear

March 24, 2010

Warning: Read the procedure carefully especially if selecting option 1 (wipes everything out and restores the machine back to factory defaults).

Power the FO-DC series fax machine off, Hold the Start & Stop buttons (at the same time) while powering the FO-DC series back on. Continue holding the Start/Stop buttons down until Display comes up. 3 options will appear in the display. Option 1 memory clears the machine back to factory defaults (warning: You will lose all settings including, rapid dials, programmed numbers, network settings, scan settings, etc). Option 2 only clears the image memory (Recommended if you get blank page print outs or the same print out over and over). Option 3 cancels the memory clear procedure.

Please call Les Olson Company at 801-486-7431 and ask for the Fax shop if you have any questions or concerns.

Les Olson Company Knowledge Base

<http://www.kb.lesolson.com/InstantKB2016/KnowledgebaseArticle50057.aspx>