

How to Enable Page Numbering for Faxes

March 26, 2010

Models:MX-M283N/MX-M363N/MX-M453N/MX-M503N/MX-FXX2

Symptom: Page numbering not working for faxes.

Cause: The setting must be enabled.

Solution: Follow these steps to enable page numbering for faxes.

1. Go to System Settings
2. Enter the Admin password (the default password is admin)
3. Choose Image Send Settings
4. Select Fax Send Settings
5. Check the box for Print Page Number at the Receiver

Les Olson Company Knowledge Base

<http://www.kb.lesolson.com/InstantKB2016/KnowledgebaseArticle50135.aspx>